

The Finn was designed in 1949 by Rickard Sarby and has been used at the Olympic Games since 1952.

2015 Edition

INTERNATIONAL FINN CLASS RULES 2015 Edition - Version 1

(Blank Page)

INDEX

PART I – ADMINISTRATION

Section A – General A.1 Language5 Abbreviations5 A.2 A.3 Authorities and Responsibilities5 Administration of the Class5 A.4 A.5 ISAF Rules6 A.6 Notice of Race and Sailing Instructions6 A.7 Class Rules Amendments6 A.8 Class Rules Interpretations6 A.9 International Class Fee(s) and ISAF Hull Identification Sticker6 A.10 Sail Numbers7 A.11 Certification7 A.12 Validity of Certificates7 A.13 Compliance with Class Rules8 A.14 Re-Certification8 A.15 Old Boats9

Section B – Boat Eligibility

B.1	Certification10
B.2	Certification Marks10
B.3	Class Association
	Membership10

PART II – REQUIREMENTS AND LIMITATIONS

Section C – Conditions for Racing

C.1	General11
C.2	Crew11
C.3	Personal Equipment11
C.4	Advertising11
C.5	Boat Equipment12
C.6	Boat13

C.7	Hull	13
C.8	Centreboard and Rudder	14
C.9	Rig	15
C.10	Sails	17
Secti	on D– Hull	
D.1	Parts	19
D.2	General	19
D.3	Hull	20
D.4	Deck	23
D.5	Buoyancy	23
D.6	Gunwale rubbing strakes	25
D.7	Floorboards or	
	Double Bottom	25
D.8	Keelbands and Stemband	
D.9	Assembled Hull	27
Secti	on E –Centreboard and Rudd	er
E.1	General	33
E.2	Centreboard	33
E.3	Rudder Assembly	34
Secti	on F – Rig	
F.1	General	37
F.2	Mast	37
F.3	Boom	39
Secti	on G – Sail	
G.1	General	43
PAR	Γ III – APPENDICES	
	ndix H.1 - Certificate,	
	surement form, mast card	47
	ertification marks	
	endix H.2 - Diagrams	48
	ndix H.3 - Weight	- 4
distrib	oution and centre of gravity	51

Appendix H.4 - Class rule amendments and interpretations53

INTRODUCTION

FINN hulls, hull appendages, rigs and sails are measurement controlled.

FINN mast spars and sails shall be measured before leaving the manufacturer. The rules provide an option for using an approved in-house measurer.

Owners and helmsmen should be aware that compliance with rules in Section C is NOT checked as part of the certification process.

Rules regulating the use of equipment during a race are contained in Section C of these class rules, in ERS Part I and in the Racing Rules of Sailing.

PLEASE REMEMBER:

THESE RULES ARE **CLOSED CLASS RULES** WHERE IF IT DOES NOT SPECIFICALLY SAY THAT YOU MAY – THEN YOU SHALL NOT.

COMPONENTS, AND THEIR USE, ARE DEFINED BY THEIR DESCRIPTION.

PART I – ADMINISTRATION

Section A – General

A.1 LANGUAGE

- A.1.1 The official language of the class is English and in case of dispute over translation the English text shall prevail.
- A.1.2 The word "shall" is mandatory and the word "may" is permissive.

A.2 ABBREVIATIONS

- A.2.1 ISAF International Sailing Federation
 - MNA ISAF Member National Authority
 - IFA International Finn Association
 - NFA National Finn Association
 - ERS Equipment Rules of Sailing
 - RRS Racing Rules of Sailing

A.3 AUTHORITIES AND RESPONSIBILITIES

- A.3.1 The international authority of the class is the ISAF which shall co-operate with the IFA in all matters concerning these **class rules**.
- A.3.2 No legal responsibility with respect to these **class rules**, or accuracy of measurement, rests with:

the ISAF, the MNA, the IFA,

an NFA,

the certification authority,

an official measurer.

No claim arising from these **class rules** can be entertained.

A.3.3 Notwithstanding anything contained herein, the **certification authority** has the authority to withdraw a **certificate** and shall do so on the request of the ISAF.

A.4 ADMINISTRATION OF THE CLASS

- A.4.1 The administering authority is the IFA. Except as provided for under A.10.3, the **certification authority** is the NFA of the boat's owner. The NFA may delegate part or all of its functions, as stated in these **class rules**, to a MNA.
- A.4.2 In countries where there is no NFA or MNA, or where neither of these wishes to administer the class, its administrative functions as stated in these **class rules** shall be carried out by the IFA.

A.5 ISAF RULES

- A.5.1 These **class rules** shall be read in conjunction with the 2013 2016 ERS and the current RRS.
- A.5.2 Except where used in headings, when a term is printed in "**bold**" the definition in the ERS applies and when a term is printed in "*italics*" the definition in the RRS applies.

A.6 NOTICE OF RACE AND SAILING INSTRUCTIONS

- A.6.1 At Events of World Championship Grade and of Grade 1, the Notice of Race/Sailing Instructions may vary these **class rules** only with the agreement of the IFA and the ISAF.
- A.6.2 At other Open Events, the Notice of Race/Sailing Instructions may vary these **class rules** only with the agreement of the NFA.

A.7 CLASS RULES AMENDMENTS

- A.7.1 Amendments to these **class rules** shall be proposed by the IFA and require approval by the ISAF in accordance with the ISAF Regulations. The class procedure is at Appendix H.4.
- A.7.2 The Notice of Race or Sailing Instructions may state a higher recommended windspeed of 12 kts for rule C.1.1(2).

A.8 CLASS RULES INTERPRETATIONS

A.8.1 GENERAL

Interpretation of **class rules** shall be made in accordance with the ISAF Regulations. The class procedure is at Appendix H.4.

A.8.2 AT AN EVENT

Any interpretation of **class rules** required at an event may be made by an international jury constituted in accordance with the RRS. The international jury should consult with the IFA Technical Committee and class representatives. Such interpretation shall only be valid during the event and the organising authority shall, as soon as practical after the event, inform the IFA, the MNA and the ISAF. The class procedure is at Appendix H.4.

A.9 INTERNATIONAL CLASS FEE(S) AND ISAF HULL IDENTIFICATION STICKER

- A.9.1 The builder shall pay the International Class Fee on every hull built, whether or not it is subsequently measured and registered. Payment shall be made to the ISAF, which will transfer the agreed amount to the IFA.
- A.9.2 The ISAF shall, after having received the International Class Fee for the hull, send the ISAF Hull Identification Sticker to the hull builder.
- A.9.3 The Hull Identification Sticker Number shall not be changed.
- A.9.4 If the Hull Identification Sticker is excessively damaged or missing, a replacement Sticker shall be obtained from ISAF. ISAF should notify the Class Association when a replacement sticker is issued.

A.10 SAIL NUMBERS

- A.10.1 Sail numbers shall be issued by the **certification authority.**
- A.10.2 Except as provided for under A.10.4, sail numbers shall be issued to all boats, in consecutive order starting at "1" for each national authority.
- A.10.3 Personal sail numbers may be issued by the **certification authority** in a sailor's home country. Personal sail numbers are additional to the sail numbers issued under A.10.2. If the use of a personal sail number is likely to cause confusion, a race committee may require that a boat use the sail number issued under rule A.10.2 or A.10.4, or another agreed number.
- A.10.4 For boats primarily owned for chartering, Rule A.10.2 is not mandatory. A chartered or borrowed boat may sail under the Helmsman's National Letters and her ISAF Sticker Number, or under the Helmsman's Personal Sail Number if applicable.

A.11 CERTIFICATION

- A.11.1 The Certification Documentation consists of a **certificate**, a class rule book, a completed measurement form, and mast card(s). If attachments are made to the **certificate**, this shall be noted on the main document.
- A.11.2 For a **hull** not previously **certified**, all items required by the measurement form to be measured shall be measured by an **official measurer** and the details entered onto the form.
- A.11.3 The measurement form, and **certification** fee if required, shall be sent to the **certification authority** in the country where the **hull** is to be registered after completion of measurement.
- A.11.4 Upon receipt of a satisfactorily completed measurement form, the **certification authority** shall issue a **certificate** and return the measurement form.
- A.11.5 The **certification authority** should retain a copy of the measurement form and **certificate**, which should be transferred to the new **certification authority** upon request if the **hull** is exported.
- A.11.6 The arrangements and formats for Certification Documentation and Certification Marks are described at Appendix H.1.
- A.11.7 Certification and Measurement Documentation transfer and storage processes required under Rules A.10, A.11 and A.14, may be performed electronically where practicable.
- A.11.8 From 1 March 2013, hulls undergoing initial certification measurement shall have all identification, measurement forms and certification entered on the IFA database.

A.12 VALIDITY OF CERTIFICATES

- A.12.1 A certificate becomes invalid upon:
 - (a) change of ownership,
 - (b) withdrawal by the certification authority,
 - (c) the issue of another **certificate**.

A.13 COMPLIANCE WITH CLASS RULES

- A.13.1 A **boat** ceases to comply with the **class rules** upon:
 - (a) The use of equipment which does not comply with the class rules,
 - (b) Alterations to the position, number or mass of weight correctors,
 - (c) The use of equipment that does not comply, or that causes the **boat** not to comply, with limitations recorded on the **certificate**,
 - (d) Alteration or repair to items required by the measurement form(s) to be measured, other than permitted routine maintenance,
 - (e) A change of **class rules** that causes equipment in use to cease to be permitted, except as allowed under rule A.15.

A.14 RE-CERTIFICATION

- A.14.1 A hull may be re-certified by the issue of a new certificate, showing dates of initial and new certification as applicable:
 - (a) WHEN A CERTIFICATE BECOMES INVALID UPON CHANGE OF OWNERSHIP

The new owner shall apply for re-certification by sending the old **certificate**, and fee if required, to the **certification authority** in the country where the hull is to be re-certified. If this **certification authority** is different from the previous **certification authority** then the new owner should also send the measurement form to the new **certification authority** for recording.

The new **certification authority** shall issue a new **certificate** with the cancelled certificate attached, and return the measurement form. It should retain a copy of the measurement form and **certificate**.

(b) WHEN A CERTIFICATE HAS BEEN WITHDRAWN, OR WHEN THE CERTIFICATE AND MEASUREMENT FORM(S) CANNOT BE LOCATED

The owner shall arrange for **certification control** as required for initial **certification** and then apply for re-certification by sending the hull measurement form(s), and fee if required, to the **certification authority** in the country where the **hull** is to be re-certified.

- A.14.2 A **boat** that has ceased to comply with its **certificate** may be brought into compliance:
 - (a) WHEN THE LIMITATIONS AFFECTING THE EQUIPMENT ARE CONTROLLED BY THE CLASS RULES

By carrying out **certification control** of the affected equipment,

(b) WHEN THE LIMITATIONS AFFECTING THE EQUIPMENT ARE ON THE CERTIFICATE

By carrying out **certification control** of affected equipment as required for initial **certification**, and complying with B.1.4 if relevant.

PAGE 8

A.15 OLD BOATS

- A.15.1 The following rules always apply: C.9.4, D.9 (except those related to gunwale rubbing strakes), E.2.5 (b), G.1.
- A.15.2 Subject to A.15.1, a **hull** or other equipment not complying with current **class rules**, but complying with the **class rules** in force at a previous **certification control**, may retain **certification**, provided that the non-compliance does not give a racing advantage to the **boat**.
- A.15.3 In particular, Rule A.15.2 can be applied with respect to hull materials, centreboard thickness, centreboard coating, centreboard arm dimensions, centreboard weight, rudder hangings, gunwale rubbing strakes, mast centre of gravity, mast bearing diameters and boom attachment arrangement. If Rule A.15.2 is applied with respect to the boom attachment arrangement, then a mast **lower limit mark** must be made, complying with the older class rules (860 mm above the heel, width minimum 13 mm).
- A.15.4 Altered or renewed equipment shall comply with current **class rules** unless, in the opinion of the **certification authority**, this is unreasonable.
- A.15.5 All alterations involving removal of weight including correctors must be made under the supervision of an **official measurer**, who shall amend the **Certificate** and Measurement Form accordingly.
- A.15.6 Weight may be removed if the **hull** and **centreboard** are then re-weighed and retested together using the Lamboley Test.
- A.15.7 As an exception, If the initial distance λ is greater than 2110 mm, a simple magnetic compass and its mounting may be removed, and corrector weight may be removed from a position between 1000mm and 2100mm longitudinally from the Hull Datum Point. The **hull** with **centreboard** shall then be re-weighed. If the measurer has reasonable doubt about whether Rule D.9.3 (c) may be contravened, he shall require compliance with A.15.6.

Section B – Boat Eligibility

For a **boat** to be eligible when *racing*, the rules in this section shall be complied with.

B.1 CERTIFICATION

- B.1.1 The Certification Documentation specified in A.11.1 shall be held by the helmsman and shall be available upon official demand.
- B.1.2 The boat, all spars, sails and equipment shall have been measured by an **official measurer**, found correct, and the results entered upon the Measurement Form or Measurement Cards where appropriate.
- B.1.3 The hull shall have a valid **certificate** including **corrector weight** and related details as specified in C.7.2 and C.7.3.
- B.1.4 Any alteration to the information entered under B.1.3 shall be recorded on the **certificate** (or on an attachment) by an **official measurer**, who shall sign and date the alteration.

B.2 CERTIFICATION MARKS

- B.2.1 The mast shall carry a valid sticker and have a valid mast card.
- B.2.2 The sail shall have a valid IFA sail label attached near the tack.
- B.2.3 The Centreboard, Rudder and Boom shall carry valid certification marks.

B.3 CLASS ASSOCIATION MEMBERSHIP

B.3.1 The owner must be a member of IFA.

PART II - REQUIREMENTS AND LIMITATIONS

The **crew** and the **boat** shall comply with the rules in Part II when *racing*. Measurement to check conformity with rules of Section C is not part of **certification control**.

The rules in Part II are **closed class rules.** Measurement shall be carried out in accordance with the ERS except where varied in this part.

Section C – Conditions for Racing

Rules that are not part of certification control are placed in this section. The reason could be either that compliance with the rule could only be checked at an event or that checking requires access to one or more parts that are individually certified.

C.1 GENERAL

- C.1.1 RULES
 - (1) RRS 42.3 is changed by adding: The Race Committee may signal in accordance with RRS Appendix P5 that pumping, rocking and ooching are permitted after the starting signal, except when the boat's proper course is close-hauled or above. This changes rules 42.2(a), 42.2(b) and 42.2(c).
 - (2) The Finn Class recommends that race committees apply Rule C.1.1 (1) in winds of 10 knots and above, measured at deck level on a race committee boat at the windward mark. See also A.7.2.
 - (3) In accordance with RRS 43.1(b), the maximum weight for a competitor's clothing and equipment is increased from 8kg to 10kg.

C.2 CREW

C.2.1 LIMITATIONS

The **crew** shall consist of 1 person.

C.3 PERSONAL EQUIPMENT

C.3.1 TOTAL WEIGHT See Class Rule C.1.1(3)

C.4 ADVERTISING

C.4.1 LIMITATIONS Advertising shall only be displayed in accordance with the ISAF Advertising Code. (See ISAF Regulation 20)

PAGE 11

C.5 BOAT EQUIPMENT

C.5.1 FOR USE

(a) Mandatory

(1) Anchor and anchor warps if required by the Notice of Race and/or Sailing Instructions.

(b) Optional

- (1) Electronic or mechanical timing devices.
- (2) Magnetic compasses having no electronics.
- (3) One electronic self-contained compass, using magnetic input. If electronic, the compass may have only heading and timing functions. The display letters and numerals shall be not more than 30 mm high.

The display may show only the following:

- heading (damping may be adjusted manually),
- heading ± a tacking angle (which may be adjusted manually),
- time,
- race timing information,
- identification,
- battery condition, system error, adjustment and calibration information.

Race timing information may be transmitted by sound. The electronic compass shall not deliver, store or correlate information in any way except as described here.

(4) Other equipment and fittings normally carried in boats such as hand bailers, buckets, flags, mechanical wind indicators, anchors and anchor warps, fenders, bags, bottles, manual recorders, writing equipment and spares.

C.5.2 NOT FOR USE

(a) Mandatory

(1) Towing rope minimum 8 m long of not less than 8 mm in diameter, capable of floating. The towing rope must be readily available without contravening Rule C.6.1 (b).

(b) **Optional**

(1) One paddle.

C.6 BOAT

C.6.1 FLOTATION

- (a) Buoyancy shall ensure that in the event of complete flooding, a fully rigged boat with intact buoyancy units will float approximately level.
- (b) It is the owner's responsibility to see that the buoyancy apparatus is kept securely fastened and fully effective when afloat. Hatch covers and drainage plugs for buoyancy units shall be kept in place at all times.
- (c) **Official Measurers**, Race Committees or Juries may require that a buoyancy test be satisfactorily completed at any time.

C.6.2 LIMITATION

When this rule is invoked in the NoR or Sailing Instructions, the following equipment limitations shall apply:

Not more than 1 hull with 1 centreboard, 2 masts, 2 booms, 2 rudders and 2 sails may be used during an event. When an item has been lost or damaged beyond repair the race committee may approve additional equipment.

C.7 HULL

C.7.1 MODIFICATIONS AND MAINTENANCE

- (a) The hull shell, decks, bulkheads and double bottom (if fitted) shall not be altered in any way except as permitted by these **class rules**.
- (b) Holes not bigger than necessary for the installation of fittings and passage of lines may be made in decks and bulkheads, but not for the passage of lines through buoyancy units.
- (c) Routine maintenance such as painting and polishing is permitted without re-measurement and re-**certification**.
- (d) If any hull moulding is repaired in a way that might cause Rules C.6.1 or D.9 to be contravened, an **official measurer** shall satisfy himself that the equipment remains within the rules. The **official measurer** shall also describe the details of the repair on the **certificate**.
- (e) The lower part of the moulded centreboard slot may be filled where the lowered centreboard leaves a gap.

C.7.2 WEIGHT AND WEIGHT DISTRIBUTION

After completion of **certification control**, if fittings or other items are moved in a way that might cause Rules D.9.2 and D.9.3 to be infringed, Rule A.13.1 shall apply and a new **certification control** under Rules D.9.2 and D.9.3 is required.

C.7.3 FITTINGS

- (a) The **mast** bearings may be adjustable for position fore and aft when not *racing*, but any adjustable or movable part, whether permanently part of the step or not, shall always be forward of Station 7.
- (b) The fore-and-aft movement at the masthead due to play at the deck and heel bearing systems, shall not exceed the amount measured as follows:



With the boat held stern down, a light line shall be rigged at a constant tension from the masthead halyard sheave to the top of the transom. The **mast** shall be pushed maximum forward and maximum aft to take up play at the bearings. The difference in the distance from the masthead to the transom shall not exceed 10 cm.

- (c) Hiking pads, attached to but removable from the **hull** are permitted. They shall extend not more than 10 mm outboard of the vertical plane of the gunwale rubbing strake.
- (d) Standing rigging is prohibited.
- (e) Other fittings are permitted, subject to:
 - (1) The fitting shall cause no other rule to be infringed.
 - (2) It shall be possible to remove a fitting without damaging the structure.
 - (3) Holes and recesses may be cut to receive a fitting.
 - (4) Fittings shall have a reasonable weight, which must not be for the alteration of the boat's weight distribution.
 - (5) Fittings having a significant effect on the **hull** weight distribution shall be recorded on the measurement **certificate**.

C.8 CENTREBOARD AND RUDDER

C.8.1 MAINTENANCE

Routine maintenance such as painting and polishing is permitted without remeasurement and re-**certification**.

C.8.2 LIMITATIONS

- (a) Only one **centreboard** shall be used during an event, except when a **centreboard** has been lost or damaged beyond repair.
- (b) See C.6.2.

C.8.3 CENTREBOARD

(a) **Use**

There shall be an arrangement to prevent the **centreboard** from retracting completely if the boat is upside down.

C.8.4 RUDDER

(a) **Use**

- (1) There shall be a fitting to prevent the **rudder** from falling off if the boat is upside down.
- (2) Except as allowed in (3) below, lifting rudder blades shall be pinned or bolted so that the rudder assembly complies with E.3.4.
- (3) A NA or Race Committee may allow lifting of the rudder blade if local conditions justify it and it is clearly stated in the Notice of Race and the Sailing Instructions.

PAGE **14**

C.9 RIG

C.9.1 MAINTENANCE

Routine maintenance such as painting and polishing is permitted without re-measurement and re-**certification**.

- C.9.2 LIMITATIONS See C.6.2.
- C.9.3 MAST

Use


- (1) The **spar** shall be fitted in such a way that it will not come out of the step when the boat is capsized.
- (2) Except for normal sail controls, arrangements to introduce pre-bend or twist, or to vary the stiffness of a mast during the race are prohibited.
- (3) EITHER a stop shall be fitted so that Rule C.10.4 (c) cannot be contravened

OR a halyard lock arrangement fitted within 1m of the **upper point** shall be used.

C.9.4 BOOM

(a)	Dimensions	minimum	maximum
	Limit mark width	13 mm	
	Boom Outer Point from aft edge line		3270 mm

- (b) Use
 - (1) The boom shall be fitted to the mast so that all parts rotate together. Arrangements allowing over rotation of the mast are prohibited.
 - (2) Mainsheet and Mainsheet block attachments on the boom allowing additional athwartship travel are prohibited.
 - (3) A stop shall be fitted so that rule C.10.4 (d) cannot be contravened.

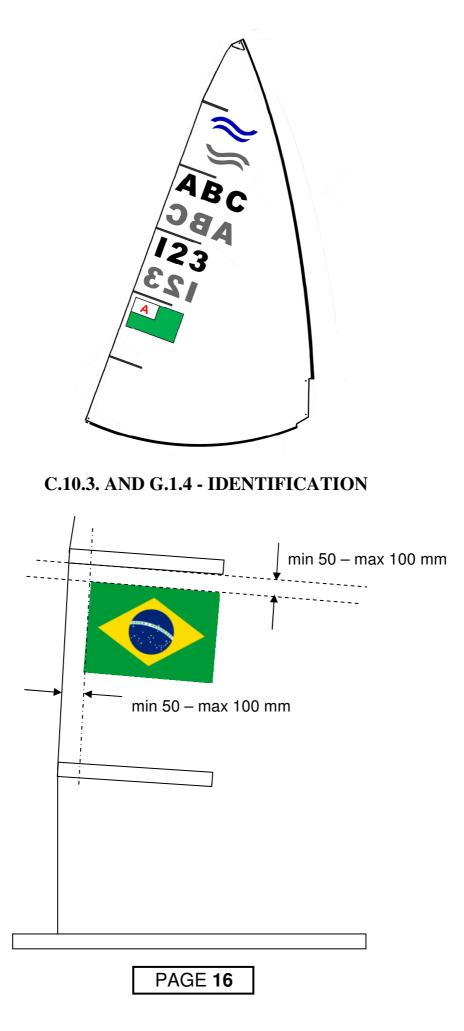


C.10 SAILS

- C.10.1 MODIFICATION, MAINTENANCE AND REPAIR
 - (a) Routine repairs and maintenance are permitted without re-measurement and re-**certification**.
- C.10.2 LIMITATIONS


See C.6.2.

C.10.3 IDENTIFICATION


- (a) The national letters and sail numbers shall comply with the RRS except where prescribed otherwise in these class rules. National letters and sail numbers shall be made from additional material of contrasting colour, firmly attached to the sail. National letters and sail numbers shall not be painted on.
- (b) As an exception to G.1.4 (a), for winners of the Finn Gold Cup and for Olympic Gold Medallists in the Finn Class, the sail insignia waves may be coloured Gold.
- (c) At the ISAF Sailing World Cup and the ISAF Sailing World Championship, or when required by the Notice of Race, a **skipper's** national flag, corresponding to the national letters, of nominal size 740 x 443 mm, shall be applied to each side of the sail, positioned such that the aft edge of each flag is between 50 and 100 mm from the **leech** and the upper edge is between 50 and 100 mm below the second lower **batten pocket.** The flags shall be made from additional material. Permanent ink pens or similar shall not be used to make the national flags.
- C.10.4 USE
 - (a) The **sail** shall be hoisted on a halyard. The arrangement shall permit hoisting and lowering of the **sail** at sea.
 - (b) Luff and foot boltropes shall be in the spar grooves or tracks.
 - (c) The highest visible point of the **sail**, projected at 90° to the mast **spar**, shall not be set above the mast **upper point.**
 - (d) The aftmost visible part of the **sail**, projected at 90° to the boom **spar**, shall not be set outboard of the boom **outer point**.

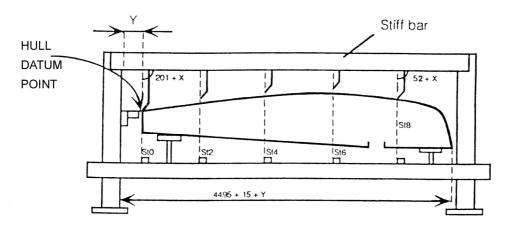

Section D - Principles of hull measurement when using a jig

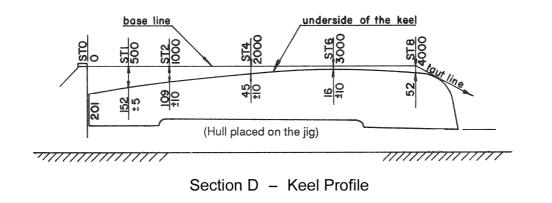

D.3.2 and D.9.1 - Radius at concave corners; thwart and centreboard case dimensions.

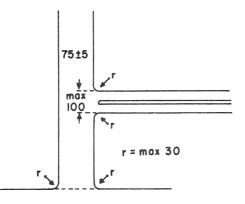

PAGE 18

Section D – Hull

D.1 PARTS

- D.1.1 MANDATORY
 - (a) Hull shell
 - (b) Deck
 - (c) Thwart
 - (d) Buoyancy units
 - (e) Gunwale rubbing strakes
 - (f) Floorboards or double bottom
 - (g) Keel bands
- D.1.2 OPTIONAL
 - (a) Bulkheads

D.2 GENERAL

- D.2.1 CERTIFICATION
 - (a) The hull and centreboard shall be measured together, and details shall be recorded upon the measurement form and certificate as specified by Rule A.11. If a new centreboard is fitted, then certification control is required under Rule D.9, and measurement under E.2.5 (b).
 - (b) ISAF or an MNA may appoint one or more **In-House Official Measurers** to measure and **certify hulls** and **hull appendages** produced by that manufacturer.
- D.2.2 DEFINITIONS
 - (a) The three major axes of the boat at 90° to each other vertical, longitudinal and transverse, shall be related to the baseline and the **hull** centreplane. The terms "above" and "below" assume that the hull is upright.
 - (b) Hull Datum Point

The intersection, on the centreplane of the **hull**, between the underside of the shell (excluding keelband if fitted) and the transom.

(c) Baseline

The measurement baseline shall be on the centreplane of the hull at the following vertical distances:

- (1) 201 mm below the hull datum point.
- (2) at Station 8 : 52 mm below the keelband.
- (d) Stations

With the baseline horizontal, the Measurement Stations are the vertical planes normal to the baseline, with Station 0 at the hull datum point, Station 1 at 500 mm forward of the hull datum point, Station 2 at 1000 mm forward of the hull datum point, and so on.



- (e) **Hull length** is the distance parallel to the baseline from the plane of station 0 to the outside of the stemband, excluding any gunwale rubbing strake.
- (f) The Stem Template Datum Point is at the underneath of the keelband/stemband, at a position forward or aft of Station 8 by the amount that the hull length is greater or less than 4495mm.

D.2.3 BUILDERS

- (a) The Finn may be built by any professional or amateur builder
- (b) Professional builders shall be responsible for supplying boats or kits complying with the Finn Class Rules. The builder shall, at his own expense, correct or replace any boat that fails to pass certification control, due to omission or error by the builder, provided that the boat is submitted for certification control within 12 months of purchase.
- (c) From the 1st March 2013, builders of GRP hulls builders shall have the first hull inspected by a technical committee nominee whenever they bring into service new moulds for the hull, decks or inner hull.
- D.2.4 IDENTIFICATION

The ISAF Hull Identification Sticker prescribed by Rule A.9 shall be permanently placed in a visible spot on the centreboard case or on the aft bulkhead of the cockpit.

D.3 HULL

D.3.1 MATERIALS

The **hull** shall be made from wood or glass reinforced plastic, except that

- (i) core materials may be of foam or other material not containing carbon fibre.
- (ii) Rules D.6.1 and D.8.1 apply.
- (iii) Stern drain tubes may be of any material not containing carbon fibre.
- (iv) Except for D.3.1 (iii), this rule does not apply to **hull** fittings and **corrector weights.**


D.3.2 CONSTRUCTION

- (a) The concave corners where hull panels, deck, thwart, centreboard case and bulkheads meet may be rounded to a radius of not more than 30 mm.
- (b) If the centreboard pivot pin is movable, it must not allow Rule E.2.5 (b) to be contravened. It must not be moved during a race. For certification control under Rules D.9.2 and D.9.3, the centreboard pivot pin must be in its aftmost position.
- (c) The pivot pin shall pass through the walls of the centreboard case.
- (d) Longitudinal tapering and rocking points on the centreboard box are prohibited.
- (e) Centreboard box sealing strips are prohibited.
- (f) From Station 0 to Station 6, hollows in the hull form are prohibited. From Station 6 to the Stem, hollows in the plane of the Sections are prohibited. Minor distortion due to curing of plastic hulls is acceptable.
- (g) Except at the sides of the keelband position, knuckles and chines are prohibited.




(Blank Page)

D.4 - Setting up the hull for cockpit measurement

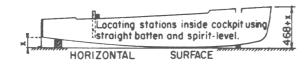


D.4 - Deviation of the top of the deck at centreplane from a straight line between the stemhead and St.0.

Limit of variation from a taut line is $(x \pm 10mm)$.

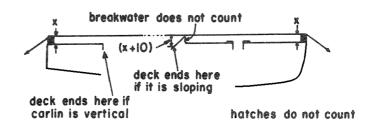


D.4 - Cockpit minimum width

p and q are examples showing the distance from centreplane to side decks or built in tanks.

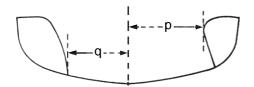

D.4 - COCKPIT MAXIMUM WIDTH

Distance from centreplane to side decks or built in tanks at some point between the sheer and 100 mm below the sheer

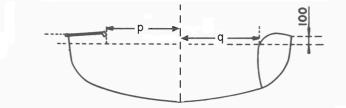

D.4 DECK

D.4.1 CONSTRUCTION

- (a) The shapes of the decking and built in tanks (if fitted) shall be approximately the same on both sides of the boat.
- (b) The general arrangement of the decking and cockpit shall be substantially as shown in the plans except as varied by these rules.
- (c) The ends of the cockpit may be either straight across the boat or faired into the side decks.
- (d) Pads and recesses to mount or locate fittings are permitted, but not at the **sheerline.**

D.5 BUOYANCY

D.5.1 DEFINITION

- (a) Buoyancy units are bags, tanks or foam blocks enabling compliance with D.5.2, D.5.3 and C.6.1.
- (b) A tank having holes for running rigging or for the mast is not a buoyancy unit.
- (c) Other buoyancy may be fitted, providing that no other rule is infringed.


D.5.2 CONSTRUCTION

- (a) At least 4 separate buoyancy units shall be fitted, so that the flooded **boat** can satisfy the buoyancy requirements of D.9.1.
- (b) Every buoyancy tank shall be fitted with an inspection hatch.
- (c) Buoyancy tanks may be fitted with drain holes. If so, they shall be capable of being securely plugged.
- (d) There shall be no surplus buoyancy within the cockpit area above the floorboards, except that flexible bags may bulge within this area as long as their main volume and their anchorages for the fixation straps are outside it.

D.5.3 INSPECTION AND TESTING


- (a) The measurer shall satisfy himself that the buoyancy units and arrangement are effective to ensure compliance with D.5.2 (a) and (b), also with C.6.1.
- (b) In deciding whether a buoyancy test is required under this Rule or under Rule C.6.1, a measurer may take account of certified compliance with the pressure drop tests prescribed in ISO 12217-3:2002 Annex C.

D.6 - Gunwale rubbing strakes

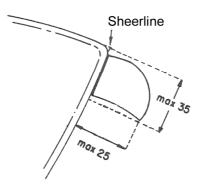

D.8 - Keel bands and stem band.

D.8.1 (c) and (d): Fairing and padding are not allowed for the keel bands, but are allowed for the stem band forward of Station 8. The stem band radius must not be less than 6 mm.

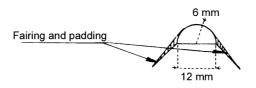

D.6 GUNWALE RUBBING STRAKES

D.6.1 MATERIALS

The gunwale rubbing strakes may be formed as part of the hull. If made separately, they may be made from any resilient Material.

D.6.2 CONSTRUCTION

- (a) Gunwale rubbing strake dimension minima are not applicable within 100 mm of the stem and 100 mm of station 0.
- (b) Gunwale rubbing strakes may be rounded on the outside and hollowed on the underside.
- (c) Gunwale rubbing strakes must be capable of supporting the boat for the pendulum test.

D.7 FLOORBOARDS OR DOUBLE BOTTOM

- D.7.1 CONSTRUCTION
 - (a) The floorboards shall extend at least from station 4 to the aft end of the cockpit. They shall lie in a straight line athwartships and have sufficient support to enable them to remain substantially flat when under load.
 - (b) The floorboards may be pierced with holes totalling not more than 10% of their nominal area.
 - (c) The floorboards may be part of the hull to form a double bottom.
- D.7.2 OPTIONAL

Forward of Station 4, floorboards if fitted need not comply with D.7.1 (a) and (b).


D.8 KEEL BANDS AND STEM BAND

D.8.1 MATERIALS

Between Stations 0 and 8, bands where fitted may be made from any resilient material.

D.8.2 CONSTRUCTION


- (a) The keel bands are optional from Station 0 to the forward end of the moulded Centreboard Slot
- (b) Forward of the moulded Centreboard Slot the stem band and keel band are compulsory
- (c) Between Station 0 and 8 Bands where fitted shall be made separately from the **hull.**
- (d) Between Station 8 and the top of the stem, the stem band may be part of the **hull**, and may be faired into the **hull**.
- (e) The forward keel band may be tapered vertically for up to 25mm from the forward end of the centreboard slot.

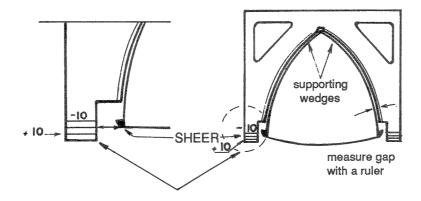

Section D.9.1 - Hull shape measured with templates

Rule D.9.1 - Checking stem profile with the template


The example shows how to set up the stem template on a boat of maximum length. The template tabs shall touch the stem band; the sheer shall lie within the tolerance; and the gap between stem band and template shall not be more than 10 mm.

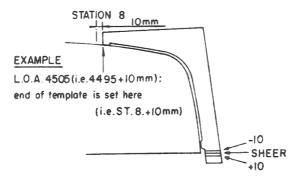


D.9 ASSEMBLED HULL

D.9.1 DIMENSIONS

DIMENSIONS		
		minimum maximum
Hull length		4480 mm 4510 mm
Transom forward of Station ():	0 mm5 mm
Baseline below hull shell:		
at station 1		147 mm . 157 mm
at station 2		
at station 4		
at station 6		
Stem profile (outside stem ba	and) to template:	0 mm10 mm
Sheer above position marke		
Keel Band Section radius (ha	•	
Stem Band (forward of Secti		
Centreboard Case;	,	
slot width		
overall width		
centre of centreboard piv	vot pin above underside o	of keel 40 mm50 mm
	for centreboard pivot pin	
Hull shell to hull template:		
	N	0
at station 0, 2, 4, 6 and 8	5	
Sheerline above position ma		0 mm 10 mm
	arked on template:	(Starboard)
	arked on template: (Port)	
	arked on template: (Port) minimum maximum	(Starboard) minimum maximum
Sheerline above position ma	arked on template: (Port) minimum maximum 310 mm10 mm	(Starboard) minimum maximum 10 mm+10 mm
Sheerline above position mat at station 0, 2, 4, 6 and 8	arked on template: (Port) minimum maximum 310 mm10 mm	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck	arked on template: (Port) minimum maximum 310 mm10 mm	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm 550 mm650 mm e centreplane:
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm 550 mm650 mm e centreplane: minimum maximum
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 4	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 4 at station 5	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 5 Distance between side decks	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm 410 mm 490 mm 440 mm e centreplane, at some
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 4 at station 5	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the s or built in tanks and the	(Starboard) minimum maximum 10 mm+10 mm 1350 mm .1450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm 410 mm 40 mm 490 mm 440 mm e centreplane, at some sheerline:
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Length of aft deck Distance between side decks at station 2 at station 3 at station 5 Distance between side decks	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the s or built in tanks and the and 100mm below the s	(Starboard) minimum maximum 10 mm+10 mm 1350 mm450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm 410 mm 440 mm e centreplane, at some sheerline: minimum maximum
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 5 Distance between side decks	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the s or built in tanks and the and 100mm below the s	(Starboard) minimum maximum 10 mm+10 mm 1350 mm450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm 500 mm 410 mm 40 mm e centreplane, at some sheerline: minimum maximum
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 5 Distance between side decks at station 4 at station 5 Distance between side decks at station 3 at station 5 Distance between side decks point between the sheerline at station 2 at station 3	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the s or built in tanks and the and 100mm below the s	(Starboard) minimum maximum 10 mm+10 mm 1350 mm450 mm 550 mm650 mm centreplane: minimum maximum 410 mm 410 mm 490 mm 490 mm 490 mm 490 mm 450 mm
Sheerline above position ma at station 0, 2, 4, 6 and 8 Length of foredeck Length of aft deck Distance between side decks at station 2 at station 3 at station 5 Distance between side decks	arked on template: (Port) minimum maximum 310 mm10 mm s or built in tanks and the and 100mm below the s	(Starboard) minimum maximum 10 mm+10 mm 1350 mm450 mm 550 mm650 mm e centreplane: minimum maximum 410 mm 500 mm 410 mm 410 mm

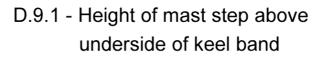

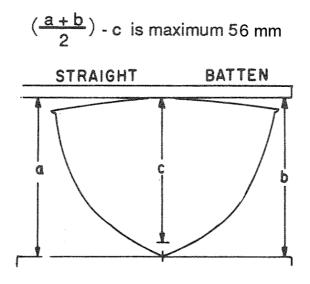

	Minimum maximum
Top of the deck at centreplane above the sheer	
at station 0	45mm55 mm
Top of the deck at centreplane above a straight	
line between the stemhead and station 0 (excluding	
breakwaters, hatches, cockpit coamings	
and mast deck bearing arrangements)	10 mm10 mm
Buoyancy: Support provided by flooded boat;	
with buoyancy units intact	-
with any one buoyancy unit flooded	-
Inside diameter of buoyancy tank inspection holes	95 mm
Gunwale rubbing strakes;	
depth (down from the sheerline around the hull)	20 mm35 mm
width (at a right angle to the shell)	20 mm25 mm
Width of floorboards;	
at station 2	800 mm
at station 3	880 mm
at station 4	720 mm
Floorboards or double bottom below sheer ;	
At station 2	285 mm
At station 3	325 mm
At station 4	
At station 5 If fitted	
At station 6	390 mm
Thwart;	
depth	
width	
aft side forward of station 0	
top of thwart below sheer	130 mm
Mainsheet traveller block (centreline of attachment);	
Travel from centreplane of boat	
Travel forward of station 4	
Height of mast heel above underside of Keel Band	
Height of mast bearing surface above deck	
Horizontal play in bearings	
Number of holes in the transom	
Diameter of 2 largest transom holes	
Diameter of 2 other holes	
Bearing at Transom Pintle above hull datum point	
Bearing at Transom Gudgeon above hull datum point.	
Axis of Transom Pintle aft of Station 0 (α)	
Axis of Transom Gudgeon aft of Station 0 (β)	
Difference between (α) and (β)	
Diameter of Pintle and of Gudgeon Hole	<i>i</i> .ə mmö. i mm

D.9.2 WEIGHT

(a) Condition for weighing

For the purpose of Rules D.9.2, D.9.3 and D.9.4, the weighing condition for the assembled **hull** with **centreboard** installed is as follows:

(1) If the Centreboard Pin, Mast Step and Deck bearing are movable, they shall be in their maximum aft positions.

The weight shall be taken

- (2) including **centreboard**, hiking pads, compass mountings and magnetic compasses having no electronics, other fittings, securely fastened containers, and normal ropes, but
- (3) excluding timer, electronic compass, rudder assembly, mainsheet and painter.
- (4) The **hull**, fittings and ropes shall be in a dry condition.
- (5) Control lines shall be pulled tight and wrapped around the thwart.
- (6) The **centreboard** shall be raised so that its lower corner is level with the underneath of the hull (keel bands excluded).

(b) Weight

minimum maximum

The weight of the hull and centreboard in dry condition . 116.0 kg

D.9.3 HULL WEIGHT DISTRIBUTION AND CENTRE OF GRAVITY

(a) See Appendix H.3 for details of the Hull Weight Distribution and Centre of Gravity Measurement.


(b) The following measurements shall be taken;


- (i) Distance λ from the centre of gravity to Station 0.
- (ii) Distance d of axis 0_1 to the underneath of the keel (keel bands excluded).
- (iii) Periods of oscillations: T_1 around axis 0_1 . T_2 around axis 0_2 .

D.9.4 CORRECTOR WEIGHTS

- (a) Lead **Corrector weights** shall be securely fastened to the **hull** if necessary to ensure compliance with D.9.2 and D.9.3. **Corrector weights** shall be visible to allow for inspection without the use of tools.
- (b) The total weight of such **corrector weights** shall not exceed 5 kg. The number, position and size of the hull **corrector weights**, and notes of other fittings (such as compasses and hiking pads) having a significant effect upon compliance with D.9.2 and D.9.3, shall be entered on the **certificate**.

(Blank Page)

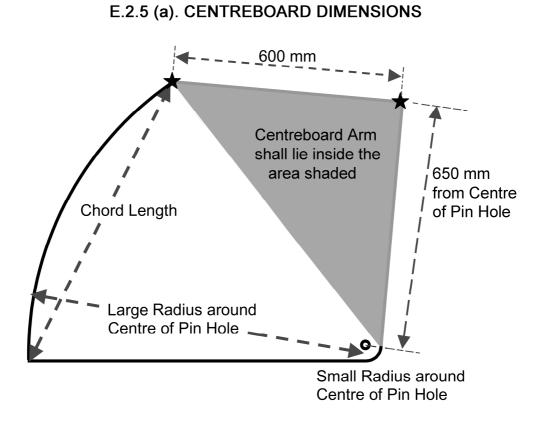

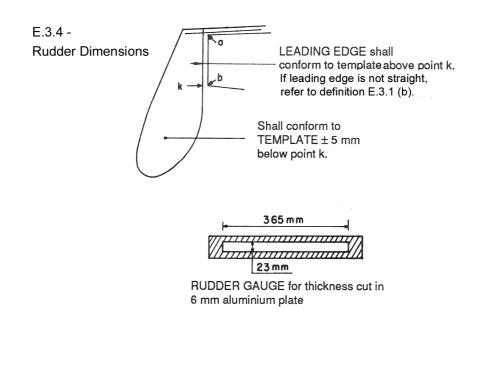

Section E – Centreboard and Rudder

E.1 GENERAL

E.1.1 CERTIFICATION

ISAF or an MNA may appoint one or more **In-House Official Measurers** to measure and **certify hull appendages** produced by that manufacturer.

E.1.2 MANUFACTURERS Rule D.2.3 applies to **hull appendages.**

E.2 CENTREBOARD

E.2.1 DEFINITION

The Centreboard theoretical reference point is where the straight line extension of the leading edge meets the largest radius measured.

- E.2.2 CERTIFICATION
 - (a) Each **centreboard** shall have its own identifying number, which may be incorporated with the **certification mark.**
 - (b) The **official measurer** shall **certify centreboards** by fixing, signing and dating a **certification mark** on the centreboard arm, visible in the raised position.
 - (c) The **certification mark** shall be a durable numbered sticker produced under the authority of the IFA, or an **official measurer's** personal mark..
- E.2.3 MATERIALS
 - (a) The **centreboard** shall be of aluminium alloy of 8 mm nominal thickness, except that the leading and trailing edges may be shaped.
 - (b) The **centreboard** may be anodised or coated with a clear coating.
 - (c) Fibre and opaque reinforcement are permitted only to repair corrosion and other damage.

E.2.4 FITTINGS

- (a) Mandatory
 - (1) A stop to prevent the **centreboard** from contravening rule E.2.5 (b).
 - (2) The **centreboard** shall have a hole to accept the centreboard pivot pin.

PAGE 33

E.2.5 DIMENSIONS

(a) Centreboard

The Centreboard Arm shall fit within the area shown in the diagram.

	minimum maximum
Large Radius	885 mm895 mm
Small Radius	30 mm 40 mm
Chord Length	815 mm . 825 mm
Thickness	8 mm8 mm
Edge shaping distance	25 mm
(b) Centreboard fitted in hull	
Hole diameter larger than pivot pin diameter	0 mm2 mm
Centreboard theoretical reference point	
below hull shell (excluding keelbands)	700 mm
Distance from hull datum point to aft edge of	
partially or fully extended centreboard,	
measured along the hull shell	2050 mm
Projection below hull shell when fully raised	0 mm

E.2.6 WEIGHT

minimum ma	ximum
11 kg	13 kg

E.3 RUDDER ASSEMBLY

E.3.1 DEFINITIONS

- (a) Point "k" is the leading edge at the waterline position taken from the **rudder** template.
- (b) The leading edge above point "k" is a line passing through point "k", running parallel to the main axis of the **rudder** gudgeon and pintle upwards to deck level.

E.3.2 CERTIFICATION

- (a) Each **rudder** shall have its own identifying number, which may be incorporated with the **certification mark.**
- (b) The **official measurer** shall **certify** rudders by fixing, signing and dating a **certification mark** on the side of the rudder stock.
- (c) The **certification mark** shall be a durable numbered sticker produced under the authority of the IFA, or an **official measurer's** personal mark.
- E.3.3 MATERIALS
 - (a) Materials for rudder construction are free.


PAGE 34

E.3.4 DIMENSIONS

E.0.1	minimum maximum
	Distance from leading edge to the rudder template Above point k 0 mm 0 mm
	Distance from the edge to the rudder template Below point k5 mm 5 mm
	Thickness of Rudder blade below point k
E.3.5	WEIGHTS minimum maximum
	 (a) Overall weight of rudder, tiller, extension and fittings 4 kg (b) Lead Corrector weights shall be securely fastened external to the rudder if necessary to ensure compliance with E.3.5 (a). (c) The total weight of such corrector weights

F.2.6 - Mast cross-section dimensions

Mast fore-and-aft shall not exceed the dimensions from the formula Mast width shall not be less than the dimensions from the formula

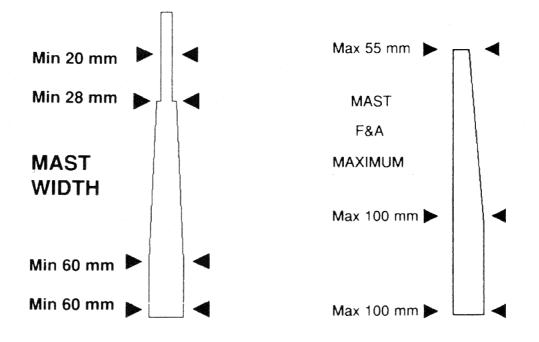



Section F – Rig

F.1 GENERAL

F.1.1 CERTIFICATION

ISAF or an MNA may appoint one or more **In-House Official Measurers** to measure and certify **spars** produced by that manufacturer.

F.1.2 MANUFACTURERS Rule D.2.3 applies to **spars**.

F.2 MAST

- F.2.1 DEFINITIONS
 - (a) Mast Spar.

As defined in ERS. An attached or glued on sail track is part of the **spar**.

(b) Main central axis.

The **main central axis** of the **spar** shall be taken as a straight line passing through the following points;

- (i) Centre of the heel bearing
- (ii) Point 20 mm forward of the aft edge at the **upper point**
- (c) (Mast) heel (point) is the lowest point of the mast.
- (d) Aft edge line.

The aft edge of the mast between the upper point and the point where the sail leaves the mast, and its extensions. Fittings or built-in fairleads where the sail leaves the mast shall be disregarded. Any **mast spar curvature** shall be removed when taking measurements depending on the aft edge line.

F.2.2 CERTIFICATION

- (a) **Masts** shall be measured by an **official measurer** before leaving the **mast** builder's premises.
- (b) Every **mast** shall have a numbered IFA Mast Label attached within 1 metre above the deck bearing.
- (c) Every **mast** shall have a Mast Measurement Card, approved by the IFA as complying with the requirements of Appendix H.1.3.
- (d) The **official measurer** shall sign and date the IFA Mast Label, and shall **certify masts** by completing the Mast Measurement Card.

PAGE 37

F.2.3 MATERIALS

- (a) The **spar** shall be made of wood, fibre reinforced plastic, aluminium alloy or a combination of these materials.
- (b) Anodising and protective coatings are allowed.
- (c) Plastic extruded sail track is allowed.
- (d) Fastenings may be of any material.

F.2.4 CONSTRUCTION

- (a) Holes shall be provided so that water drains readily from near the heel of the **spar**.
- (b) Flexible fairings are prohibited

F.2.5 FITTINGS

(a) Mandatory

- (1) Rigidly attached or integral mast bearing surfaces.
- (2) A fork fitting shall be rigidly attached to the mast, to accept the boom.
- (3) The whole top of the spar above the **upper point** shall be painted a distinctive colour.
- (4) **Corrector weights**, if fitted, shall be made of lead, and securely fastened to the outside of the mast above deck level.

(b) Optional

- (1) Mechanical wind indicators.
- (2) Cleats, fairleads, lead blocks, halyard lock, halyard crane and other arrangements for halyard and control lines.

F.2.6 DIMENSIONS

- (a) The **mast spar** fore-and-aft cross-section, including sail track but not deck ring nor other fittings shall not exceed
 - (1) From heel to 2060 mm above the heel: 100 mm; thence

(2) A uniform taper to 55 mm at 6560 mm above the heel.

Example fore-and-aft dimensions;

Distance from heel	<u>maximum</u>
2060 mm	100 mm
2560 mm	95 mm
3560 mm	85 mm
4560 mm	75 mm
5560 mm	65 mm
6560 mm	55 mm



- (b) The **mast spar** transverse cross-section shall be not less than
 - (1) From below the heel bearing to 1000 mm above the heel: 60 mm;
 - (2) From (heel +1000 mm) a uniform taper from 60 mm to 28 mm at (heel + 5000 mm)
 - (3) From (heel + 5000 mm) to (heel + 6573 mm): 20 mm

Example transverse dimensions;

Distance from heel	<u>minimum</u>
10 mm	60 mm
1000 mm	60 mm
2000 mm	52 mm
3000 mm	
4000 mm	36 mm
5000 mm	28 mm
	minimum maximum

- F.2.7 WEIGHTS

	minimum r	naximum
Mast weight	8 kg	
Corrector weights		1 kg
Mast centre of gravity above heel, including halyard and		
shackle, with halyard hoisted and tail of halyard wound		
around mast below boom fork, with corrector weights		
but excluding boom pin	.2400 mm	

F.3 BOOM

- F.3.1 CERTIFICATION
 - (a) Each **boom** shall have its own identifying number, which may be incorporated with the **certification mark.**
 - (b) The official measurer shall certify booms by fixing, signing and dating a certification mark on a side of the boom within 1 metre of the forward end.

- (c) The **certification mark** shall be a durable numbered sticker produced under the authority of the IFA, or an **official measurer's** personal mark.
- F.3.2 MATERIALS
 - (a) The **spar** shall be of wood; glass reinforced plastic, aluminium alloy or a combination of these materials.
 - (a) Anodising and protective coatings are allowed.

F.3.3 CONSTRUCTION

The **boom spar** shall include a sail groove.

F.3.4 FITTINGS

(a) Mandatory

- (1) There shall be a hole, reinforced if necessary, to accept the boom pin.
- (2) There shall be a boom pin to attach the boom to the mast.
- (3) A **boom outer limit mark** which shall be distinctively coloured and painted on.
- (4) **Corrector weights**, if fitted, shall be made of lead, and securely fastened to the outside of the boom within 1000 mm of the centre of the boom pin hole.

(b) **Optional**

- (1) Arrangements for attaching the mainsheet.
- (2) Arrangements for sail control lines and boom vang.
- (3) A fairlead where the sail leaves the **spar**.
- (4) A chafing pad beneath the outboard end of the **spar**.
- (5) Pads to protect the helmsman.

F.3.5 DIMENSIONS

minimum maximum


Boom spar cross section between 460mm and 3243 mm aft of the centre of the boom pin hole; Diameter of boom pin hole......15.5 mm ...16.5 mm Length of sail groove......2700 mm F.3.6 WEIGHTS minimum maximum Boom weight, including mast pin, blocks, boom vang outhaul and other fittings normally removed with

(Blank Page)


G.1.4 (b) - SAIL INSIGNIA



G.1.7 - SAIL MEASUREMENT

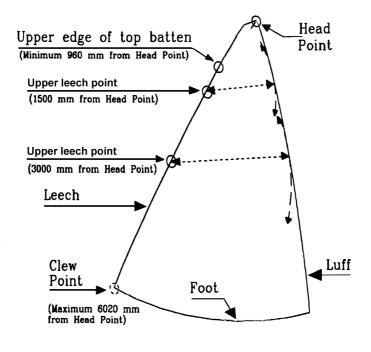

G.1.7 - Upper width at upper leech point 425 mm from the head point

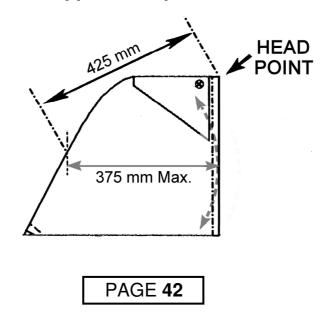

Section G – Sail

G.1 GENERAL

G.1.1 RULES

Sails shall comply with current class rules.

- G.1.2 CERTIFICATION
 - (a) ISAF or an MNA may appoint one or more **In-House Official Measurers** to measure and **certify sails** produced by that manufacturer.
 - (b) **Sails** shall be measured by an **official measurer** before leaving the sail loft.
 - (c) Every **sail** shall have a new sail label **certification mark** purchased by the sailmaker from IFA and permanently attached near the **tack**.
 - (d) The **official measurer** shall **certify sails** by signing and dating the **sail** across the **certification mark**.

G.1.3 SAILMAKER

Rule D.2.3 applies to sails.

- G.1.4 IDENTIFICATION
 - (a) The class sail insignia shall be two blue waves approximately 700 mm long. From left to right they shall go up, then down and up again. They shall be placed in accordance with Appendix G of the RRS.
 - (b) The class insignia shall be made from additional material of contrasting colour, firmly attached to the sail. Painted class insignia are prohibited.
- G.1.5 MATERIALS
 - (a) The sail shall be made of flexible materials, which may be laminated.
 - (b) Battens may be of any material.

G.1.6 CONSTRUCTION

- (a) The construction shall be: **soft sail**, **single ply sail**, with luff rope and foot rope.
- (b) Continuous layers or fibres crossing the seams are prohibited
- (c) The **sail** may have five **batten pockets** in the **leech**.
- (d) The following are permitted: Seams, stitching, glues, tapes, tabling, primary reinforcement, secondary reinforcement, corner eyes, headboard with fixings, Cunningham eye or block, flutter patches, battens, batten pocket patches, batten pocket elastic, batten pocket end caps, headboard slides extending not more than 200mm down from the head point, track slides, leech line with cleat, Velcro fastening, tell tales, sail shape indicator stripes, sail identification, sailmaker labels.

G.1.7 DIMENSIONS

In alteration to ERS H.5.1, **sails** may be measured with the battens in position.

	minimum maximum
Leech length	6020 mm
Distance from Head Point to any part of the sail	
Upper width at upper leech point 3000 mm	
from the head point **	1935 mm
Upper width at upper leech point 1500 mm	
from the head point **	
Upper width at upper leech point 425 mm	
from the head point **	
** If there is a hollow at an upper leech point , this sh	
be added to the measured distance.	
Top width	165 mm
Width of single ply panels	
Depth of headboard from head point	
Width of headboard	
Thickness of headboard	
Clew Point to:	
aft end of foot rope	
forward end of foot rope	
Batten lengths:	
Uppermost batten:	400 mm
second batten:	
third batten:	
fourth batten:	600 mm
lowest batten:	
Batten width:	50 mm
Batten pocket width, inside	50 mm
Head point to intersection of leech and upper part of	
uppermost batten	960 mm
Distance from lower part of a batten at the leech to	
the upper part of the batten below at the leech	
or to the clew point	900 mm

(Blank Page)

H.1.3 SUITABLE FORMAT FOR MAST CARD

Supplier's Letterhead with any Logo, Address, Telephone, E-Mail etc. Suppliers of International Finn Class Masts... etc. (not more than one line)

This is to Certify that the Mast has been built in accordance with the current Rules of the International Finn Class, that the Mast Label has been correctly obtained from the International Finn Association, and that to the best of my knowledge and belief the mast has passed correct measurement from the authorized Measurer below.

Signed (Mast Manufacturer or Representative).....

DateDate of Manufacture

INTERNATIONAL FINN CLASS **MAST** MEASUREMENT CARD

F.2.2 (a)	MeasurerMeasurer's Signature
	Measurer authorized byDate of Certification Control
F.2.2 (b)	IFA Mast Label attachedNumber
F.2.3	Materials
F.2.3 (c)	Material of the sail track
F.2.4	Construction(complies)
F.2.5	Fittings(complies)
F.2.6 (a), (b) an	d (c) Dimensions (complies)
F.2.6 (d)	Other Dimensions(complies)
F.2.7	Weight with Correctors (> 8 kg)
F.2.5 (a)(4)	Position and fixing of corrector(complies)
F.2.7	Corrector Weight (< 1 kg)
	Height of Corrector Weight(mm above heel)
	Mast Centre of Gravity (> 2400 mm above heel)

PART III – APPENDICES

The rules in Part III are **closed class rules**. Measurement shall be carried out in accordance with the ERS except where varied in this Part.

Section H

APPENDIX H.1. CERTIFICATE, MEASUREMENT FORM, MAST CARD AND CERTIFICATION MARKS.

H.1.1 CERTIFICATE

- (a) The **certificate** and attachment sheets shall be in the form annexed to these rules.
- (b) New masts, booms, centreboards, rudders and sails shall be certified as prescribed by rules A.15, B.1 and B.2.
- (c) Where alterations to the **certificate** are necessary due to changes or new equipment, obsolete items shall be crossed through and new entries made, if necessary on attachment sheets which shall be kept with the **certificate**.
- (d) Subject to rule A.15, the **certification** of older boats shall remain valid. Alterations, new weight information, other additions, and (where necessary) compliance with Section C of these rules shall be recorded on **certificate** or attachment sheets.

H.1.2 MEASUREMENT FORM

The Measurement Form for the **hull** and **centreboard** shall be in the form annexed to these rules. It shall be properly completed, and retained with the **certificate**.

H.1.3 MAST CARD


The Mast Card prescribed by rules A.11 and F.2.2 shall be in a form approved by IFA. A suitable format is shown. Manufacturers are invited to use the reverse side of the Mast Card to record the bend characteristics of the mast.


APPENDIX H.2. DIAGRAMS.

H.2.1 GENERAL DIAGRAMS RELATING TO MEASUREMENT EQUIPMENT (To be developed)


H.2.2 DIAGRAMS RELATING TO APPENDIX H.3 (LAMBOLEY SWING TEST)

Diagram 20 - WEIGHT DISTRIBUTION

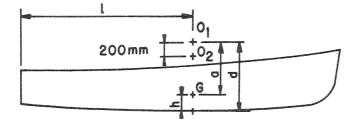

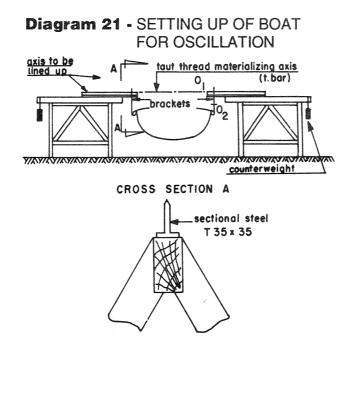




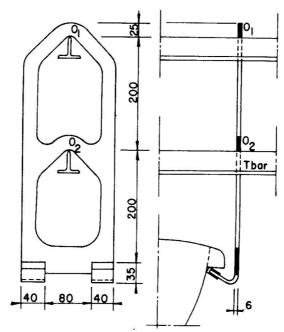

Material: Mild Steel Mass (2 hooks): 2.70 kg min, 3.30 kg max

Detailed drawings are available and should be used for construction.

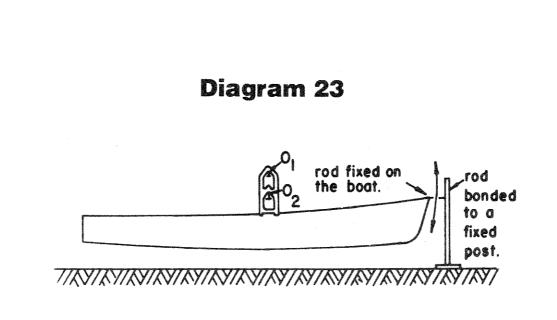



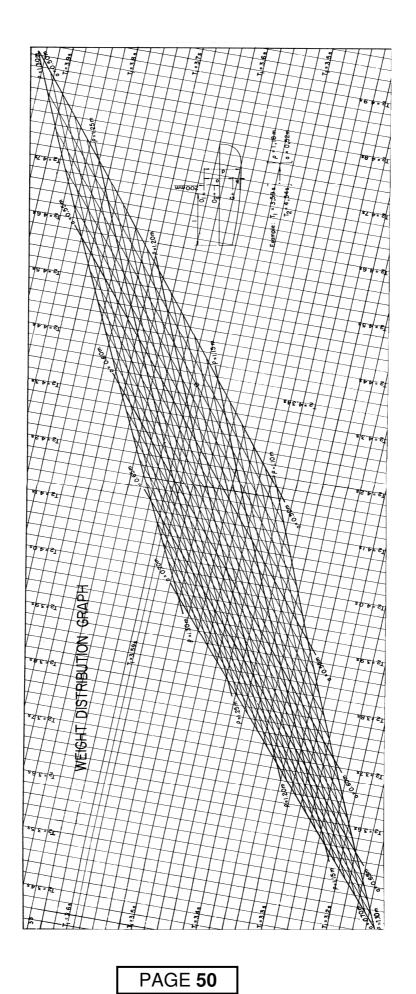


Diagram 24

The degree of concentration of the weight in the boat is described by her radius of gyration. A boat with "light ends" has a short radius of gyration.

In Diagram 20, if "a" is the distance from the oscillation axis 0_1 to the centre of gravity G, " ρ " is the radius of gyration, and "g" is the acceleration due to gravity, then the oscillating period T₁ is given by:

$$T_1 = 2\pi \sqrt{\frac{a^2 + \rho^2}{ag}}$$

We can measure T but we have two unknowns "a" and " ρ "; so we need two equations. Another is obtained by choosing a new oscillation axis 0₂ exactly 200 mm lower:

$$T_2 = 2\pi \sqrt{\frac{(a-0.2m)^2 + \rho^2}{(a-0.2m)g}}$$

Hence by measuring T_1 and T_2 we may calculate "a" and " ρ ".

Solutions applicable to the Finn are presented in the graph (See Diagram 24).

The setting up of the axes 0_1 and 0_2 may be achieved with the equipment illustrated in diagrams 21 and 22. The brackets are designed to keep distance "a" short, to aid accuracy. The distance $0_1 0_2$ shall be correct to within 1 mm. (See Diagram 20 to 24.)

WEIGHT DISTRIBUTION AND CENTRE OF GRAVITY: PRACTICE

It is essential that the measurements be made in a sheltered place. The boat shall be hung from the brackets on axis 0_1 , 0_2 and the periods of oscillation T_1 , T_2 measured.

Plot the position with co-ordinates T_1 , T_2 on the graph, and read off the values for "a" and " ρ " from the curves. The distance "I" is measured parallel to base line from Station 0 to axis 0_1 (diagram 20). If "I" is found close to limit values make sure that base line is level as in the diagram at D.4. The distance "d" can usually be measured from axis 0_1 to the underneath of the hull (excluding keelband) by means of a rule or tape passed down through the centreboard box (diagram 20). If this is impossible, use the principle shown in diagram D.9.1 (Height of Mast Step). It is wise to provide a protection under the boat but the boat shall not touch anything while oscillating. The peak to peak movements of the bow shall remain between 200 mm and 160 mm during the time when the period of oscillation is measured. There shall be no twisting

oscillations about a vertical axis. There shall be no movement of the supports. The measurement of periods T_1 and T_2 requires most care. It is recommended to operate in the following way: two time keepers stand on either side of the boat, they shall start their stopwatches when the boat passes the rest position which is made easier with two rods placed opposite each other as in diagram 23; they count ten pitching periods and if they get the same result within 0.1s, the measurement is satisfactory (the result being thus 0.01s accurate).

Stopwatches accurate to 0.05s shall be used. If a stopwatch only accurate to 0.1s is used, twenty pitching periods shall be measured.

If correction is necessary to achieve permissible figures, record only the results obtained after correction.

(See Diagram 22 and 23.)

ALTERNATIVES TO THE GRAPH

If preferred, a calculator may be programmed to obtain the values of "a" and "p".

Pocket Calculator programme:

	Input T_1 (sec)	Input T_2 (sec)
	Input b=0.2 (m)	Input g (m/sec ²)
	Calculate $k = \frac{g}{4\pi^2 b}$	
	Calculate $a = b \frac{kT_2^2 + 1}{k(T_2^2 - T_1^2) + 2}$	
	Calculate $\rho = \sqrt{abkT_1}$	$a^{2}-a^{2}$
	Show or print a and $ ho$	(m)
Check program with	$g = 9.81 m / \sec^2 T_1$	$= 3.31 \sec T_2 = 3.81 \sec$
Result should be	$a = 0.593 m \rho = 1.7$	124 m

As another alternative, a simple Computer Spreadsheet can be constructed or obtained from IFA Technical Committee.

APPENDIX H.4.

CLASS RULES AMENDMENTS

- H.4.1 Proposals for amendments to these **class rules** may be submitted in time for circulation with the AGM Agenda, for consideration by IFA Council. Proposals may be submitted by IFA Executive members, by IFA Technical Committee and by NFAs.
- H.4.2 In cases of urgency the IFA Executive may prepare submissions to ISAF without prior reference to IFA Council. IFA Council must be informed and, at the next AGM, may require action as prescribed in H.4.3 or H.4.4.
- H.4.3 Where rule changes of major significance are proposed, the IFA Executive may decide to hold a referendum of all paid-up NFA members.
- H.4.4 If so directed by IFA Council, proposed amendments to these **class rules** shall be prepared by the Chairman of the Technical Committee and submitted to ISAF in accordance with ISAF Regulations.

CLASS RULES INTERPRETATIONS

H.4.5 The object of these rules is to establish a class of boats which is one-design in all matters that affect basic speed. The rules shall be interpreted in this spirit.

Since it is unlikely that these rules can cover in detail every possible eventuality, builders are strongly advised to clear doubtful points with the IFA Technical Committee before starting construction.

- H.4.6 When points are referred to the Technical Committee, the T.C. Chairman shall:
 - Provide an opinion; or
 - Consult with the Technical Committee, who shall interpret the rules. Technical Committee interpretations should be made by at least three members. If deemed appropriate, the interpretation should be submitted to IFA Council for ratification, and notified to ISAF for endorsement.
- H.4.7 The Technical Committee shall be guided by:
 - The body lines and section plan, 1964.
 - The plans of the first carvel construction.
 - The digitised tables of coordinates for hull sections, stem and rudder profiles, and for templates.
 - The spirit of the rules.
 - Standard practice in the Finn Class.
- H.4.8 Where a builder or owner does not accept an interpretation of the Technical Committee, or a ratification by IFA Council, the matter shall be referred to the ISAF.
- H.4.9 On the Technical Committee's recommendation, to be ratified or altered by IFA Council or in urgent matters by the Executive Committee, the ISAF may give temporary or permanent dispensation, in which case the Measurer shall enter full details, signed and dated on the boat's Certificate.