



Sailing

Mounting Manual – Tracking Devices

AT THE HEART OF PERFORMANCE



Classes

**Laser, Laser Radial, RS:X, 470,
49er, 49FX, Nacra 17, Finn**

AT THE HEART OF PERFORMANCE

Laser/ Laser Radial



Place:

- ❖ On the front of the mast, 400mm above the deck
- ❖ Antenna pointing up


Mounting:

- ❖ Socket & 2 cable ties

Please mount your socket so that the number is on the outside and readable.



RS:X Men & Women

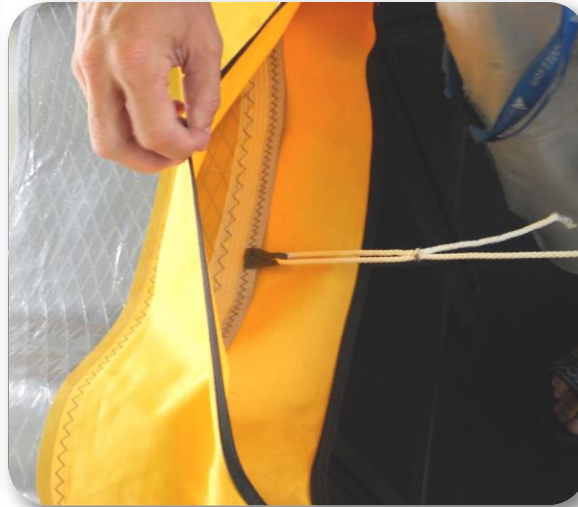

Place:

❖ inside the sail pocket.

Mounting:

❖ Socket with a rope.

❖ This rope is to be securely attached to the loop inside the sail pocket. Keep as short as possible

❖ Antenna pointing down.

Keep the socket clear of the batten.

470 Men & Women



Place:

- ❖ on the outer most length of the starboard Camera bracket. Antenna is pointing away from camera

Mounting:

- ❖ Socket & 2 cable ties

Please mount your socket so that the number is on the outside and readable.



49er & 49er Fx



Place:

- ❖ On top the top side of the boom, 200mm behind the mast (must be clear of vang bar)
- ❖ Antenna to the stern of the boat

Mounting :

- ❖ Socket & 2 cable ties

Please mount your socket so that the number is on the outside and readable.



Nacra 17



Place:

- ❖ On underside of the boom
300mm behind the mast (must
be clear of vange)
- ❖ Antenna to the bow of the boat


Mounting:

- ❖ Socket & 2 cable ties
- ❖ Do not bend antenna

❖ Please mount your socket
so that the number is on
the outside and readable.



Finn

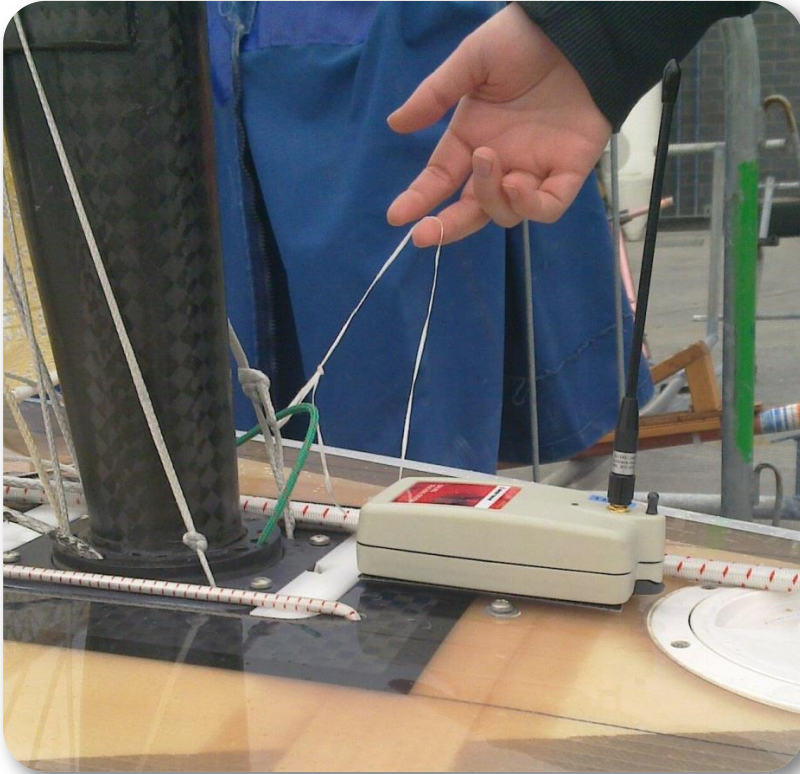

Place:

- ❖ On the foredeck, 60mm forward of the mast and on the centre line.

Mounting:

- ❖ Socket with velcro tape & safety line. Antenna to the bow of the boat.
- ❖ Ensure you have the safety line attached around the mast!